

Hilltip

HTRACK™



USER GUIDE

 
HILLTIP HTRACK TRACKING SYSTEM

Step 1

Open the cover of the Hilltip USB modem and insert a sim-card. Connect it to your spreader or sprayer controller with a USB cable. Turn on the controller. In the main menu, select HTrack.




Insert sim-card into USB modem

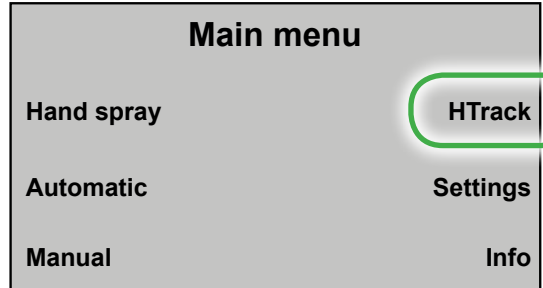


Controller main menu

Step 2

 On first setup, in the HTrack controller menu, find the controller ID. Go to the HTrack webpage, and under settings → controllers, click “Add new” to insert the controller ID and connect it to your account.

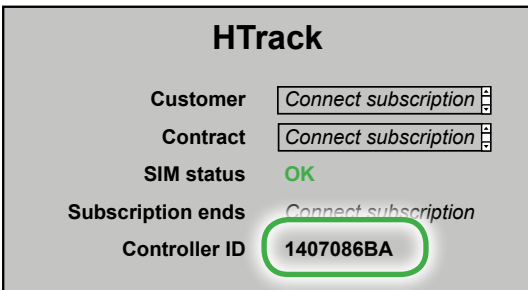

 
Controller HTrack menu - find controller ID

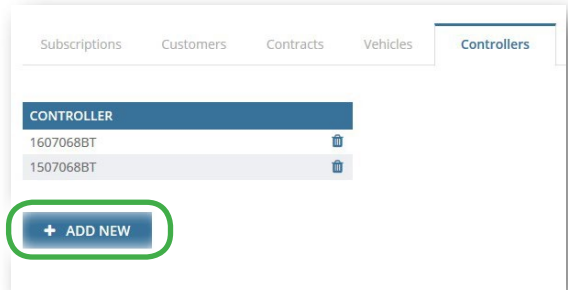

HTrack webpage - Add controller ID

Step 3

 
Go to settings → subscriptions on the webpage and edit one of your subscriptions to connect it to the controller you just registered.

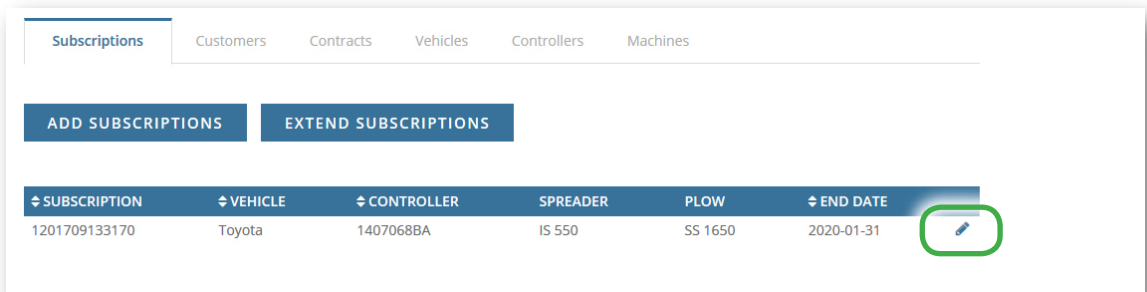

Subscriptions *Settings → Subscriptions*

You need a subscription to use HTrack. One HTrack subscription can only hold data for one vehicle/spreader combination at a time.

The table at the subscription-page shows which devices are connected to your subscription. Click the edit symbol (pencil) to change or add the vehicle, controller, spreader/sprayer or plow connected to your subscription.

Subscriptions					
Customers	Contracts	Vehicles	Controllers	Machines	
ADD SUBSCRIPTIONS		EXTEND SUBSCRIPTIONS			
↕ SUBSCRIPTION	↕ VEHICLE	↕ CONTROLLER	SPREADER	PLOW	↕ END DATE
1201709133170	Toyota	1407068BA	IS 550	SS 1650	2020-01-31
					






Click the edit symbol to edit a subscription and change or add a device to it.

Click “Add subscription“ to buy a new subscription, or “extend subscription” to extend an existing subscription.

Customers and contracts *Settings → Customers/Contracts*

HTrack is designed so that you can report specific spreading/plowing jobs to specific customers/clients. Add a new customer (e.g. City of Helsinki) by clicking “Add new” on the *Customers-page*.


Add a new contract to a specific customer by clicking “Add new” on the *Contracts page*. (e.g. add “Library” to City of Helsinki). Click the name of a customer or contract to edit it.

Subscriptions			Customers	Contracts	Vehicles	Controllers	Machines
CONTRACT		CUSTOMER					
Hospital		City of Helsinki					
Library		City of Helsinki					
Kindergarten		City of Helsinki					
Parking lot		SuperCityMarket					
Loading area		SuperCityMarket					
							
							
							
							
							
+ ADD NEW							

Example of customers and contracts

Vehicles, controllers and machines *Settings → Vehicles/Controllers*

 Add a vehicle or controller by clicking “Add new” below the matching column.
Click the name of an existing device to edit it directly in the table, click the checkmark to save.

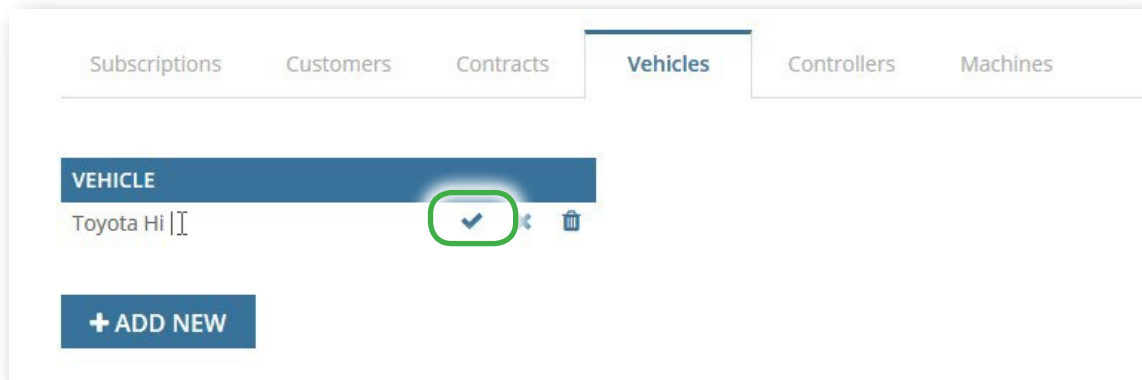

Click the name to edit

Go to the Subscription-page to combine vehicles, controllers and machines.

 
Controllers settings

To be completed after you have set up your devices and subscriptions on the webpage:
Before starting a new spreading/spraying/plowing session, go to HTrack menu in the controller and select Customer and Contract to track and to be able to create customer specific reports.



After webpage setup the options will appear in the in-cab controller

Map view *Reports* → *Map view*

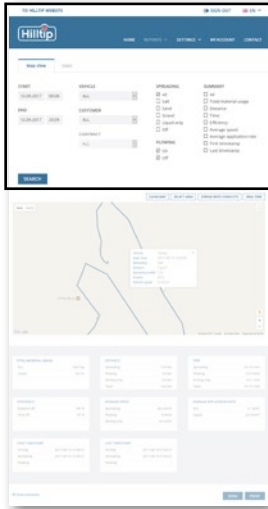

Map View
Datas

START <input type="text" value="12.09.2017"/> <input type="text" value="00:00"/> END <input type="text" value="12.09.2017"/> <input type="text" value="23:59"/>	VEHICLE <input type="text" value="ALL"/> CUSTOMER <input type="text" value="ALL"/> CONTRACT <input type="text" value="ALL"/>	SPREADING <input checked="" type="checkbox"/> All <input type="checkbox"/> Salt <input type="checkbox"/> Sand <input type="checkbox"/> Gravel <input type="checkbox"/> Liquid only <input type="checkbox"/> Off PLOWING <input checked="" type="checkbox"/> On <input checked="" type="checkbox"/> Off	SUMMARY <input type="checkbox"/> All <input type="checkbox"/> Total material usage <input type="checkbox"/> Distance <input type="checkbox"/> Time <input type="checkbox"/> Efficiency <input type="checkbox"/> Average speed <input type="checkbox"/> Average application rate <input type="checkbox"/> First timestamp <input type="checkbox"/> Last timestamp
--	--	---	--

Start - End

Set a time interval: Insert start and end time to show tracking data during a specific time interval.

Vehicle - Customer - Contract

You can choose to view details for all vehicles, customers or contracts, or a selected combination of these.

 
Spreading - Plowing

Select one or multiple spreading materials to be shown. Select if you want to see where plow has been active (on) or inactive (off), or check both values. For SprayStriker applications, please select "Liquids Only".

Summary

Check the values you want to be included in the report.

Click **SEARCH** to show details for the set attributes.

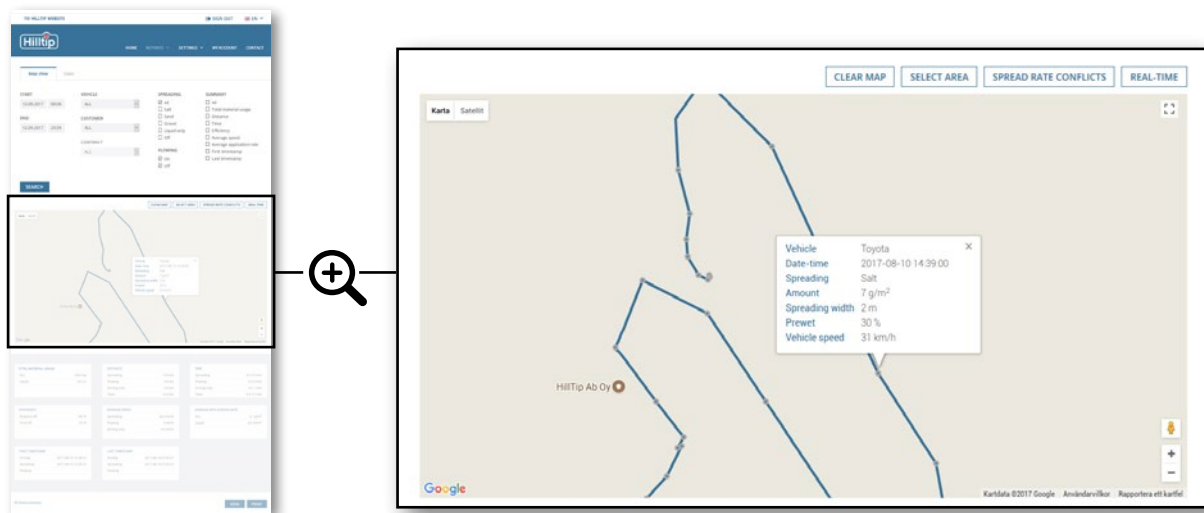

Click on a route to display checkpoints. Checkpoints are logged in 4 second intervals along the route. Click a specific checkpoint to show spreading data for that location.

Clear map

Clears route from map.

Select area

 
Click the map to create a boundary for the area you want to select. Data for this area will be shown in the summary field.

Spread rate conflicts

Highlight areas where the spreader has not been able to accomplish the spread rate as set in the controller, even if auger is at max speed. This indicates that vehicle speed is too high.

Real time

If a vehicle has been active within the last 2 minutes, its most recent position will be shown on the map.

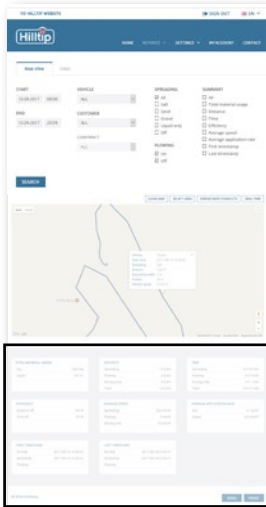

TOTAL MATERIAL USAGE		DISTANCE		TIME	
Dry	140.9 kg	Spreading	13.9 km	Spreading	0 h 16 min
Liquid	167.4 l	Plowing	0.0 km	Plowing	0 h 0 min
		Driving only	0.0 km	Driving only	0 h 1 min
		Total	14.3 km	Total	0 h 17 min

EFFICIENCY		AVERAGE SPEED		AVERAGE APPLICATION RATE	
Distance eff.	100 %	Spreading	52.3 km/h	Dry	3.1 g/m ²
Time eff.	97 %	Plowing	0 km/h	Liquid	2.8 ml/m ²
		Driving only	4.4 km/h		

FIRST TIMESTAMP		LAST TIMESTAMP	
Driving	2017-08-10 14:38:12	Driving	2017-08-18 07:42:27
Spreading	2017-08-10 14:38:12	Spreading	2017-08-18 07:42:27
Plowing	-	Plowing	-

Show summary

[SEND](#) [PRINT](#)

Summary field

The summary field shows tables which contain data relevant to the selected attributes at the top of the page.

Send as e-mail

Sends the summary report as a PDF-file to the e-mail address defined in your user profile.

Print

Generates a summary report as a PDF-file that can be printed or saved.

Datasheet view *Reports → Datasheet view*

Use the datasheet mode when you need to summarize data for longer periods of time. The data will be summarized in tables, and not on a map.

Start - End

Set a time interval: Insert start and end time to show details for the selected customer or vehicle during a specific time interval.

Type

You can choose to view details for all or a specific customer/contract or vehicle.

Operating mode

Select which activity/activities should be shown in the summary.

Spreading material

Check the spreading materials you want to be shown in the summary. For SprayStriker applications, please select "Liquids only".

Calculations

Check which attributes should be calculated in the summary report.

Click **SEARCH** to show details for the set attributes.



Oy HillTip Ab

Pukkisaarentie 6
FIN-68600 Pietarsaari
Finland

+358 50 5983 026

+358 50 3659 415

www.hilltip.com
info@hilltip.com